


# SEITec DRILLED SHAFT CISTERN

## INSTALLATION STEPS

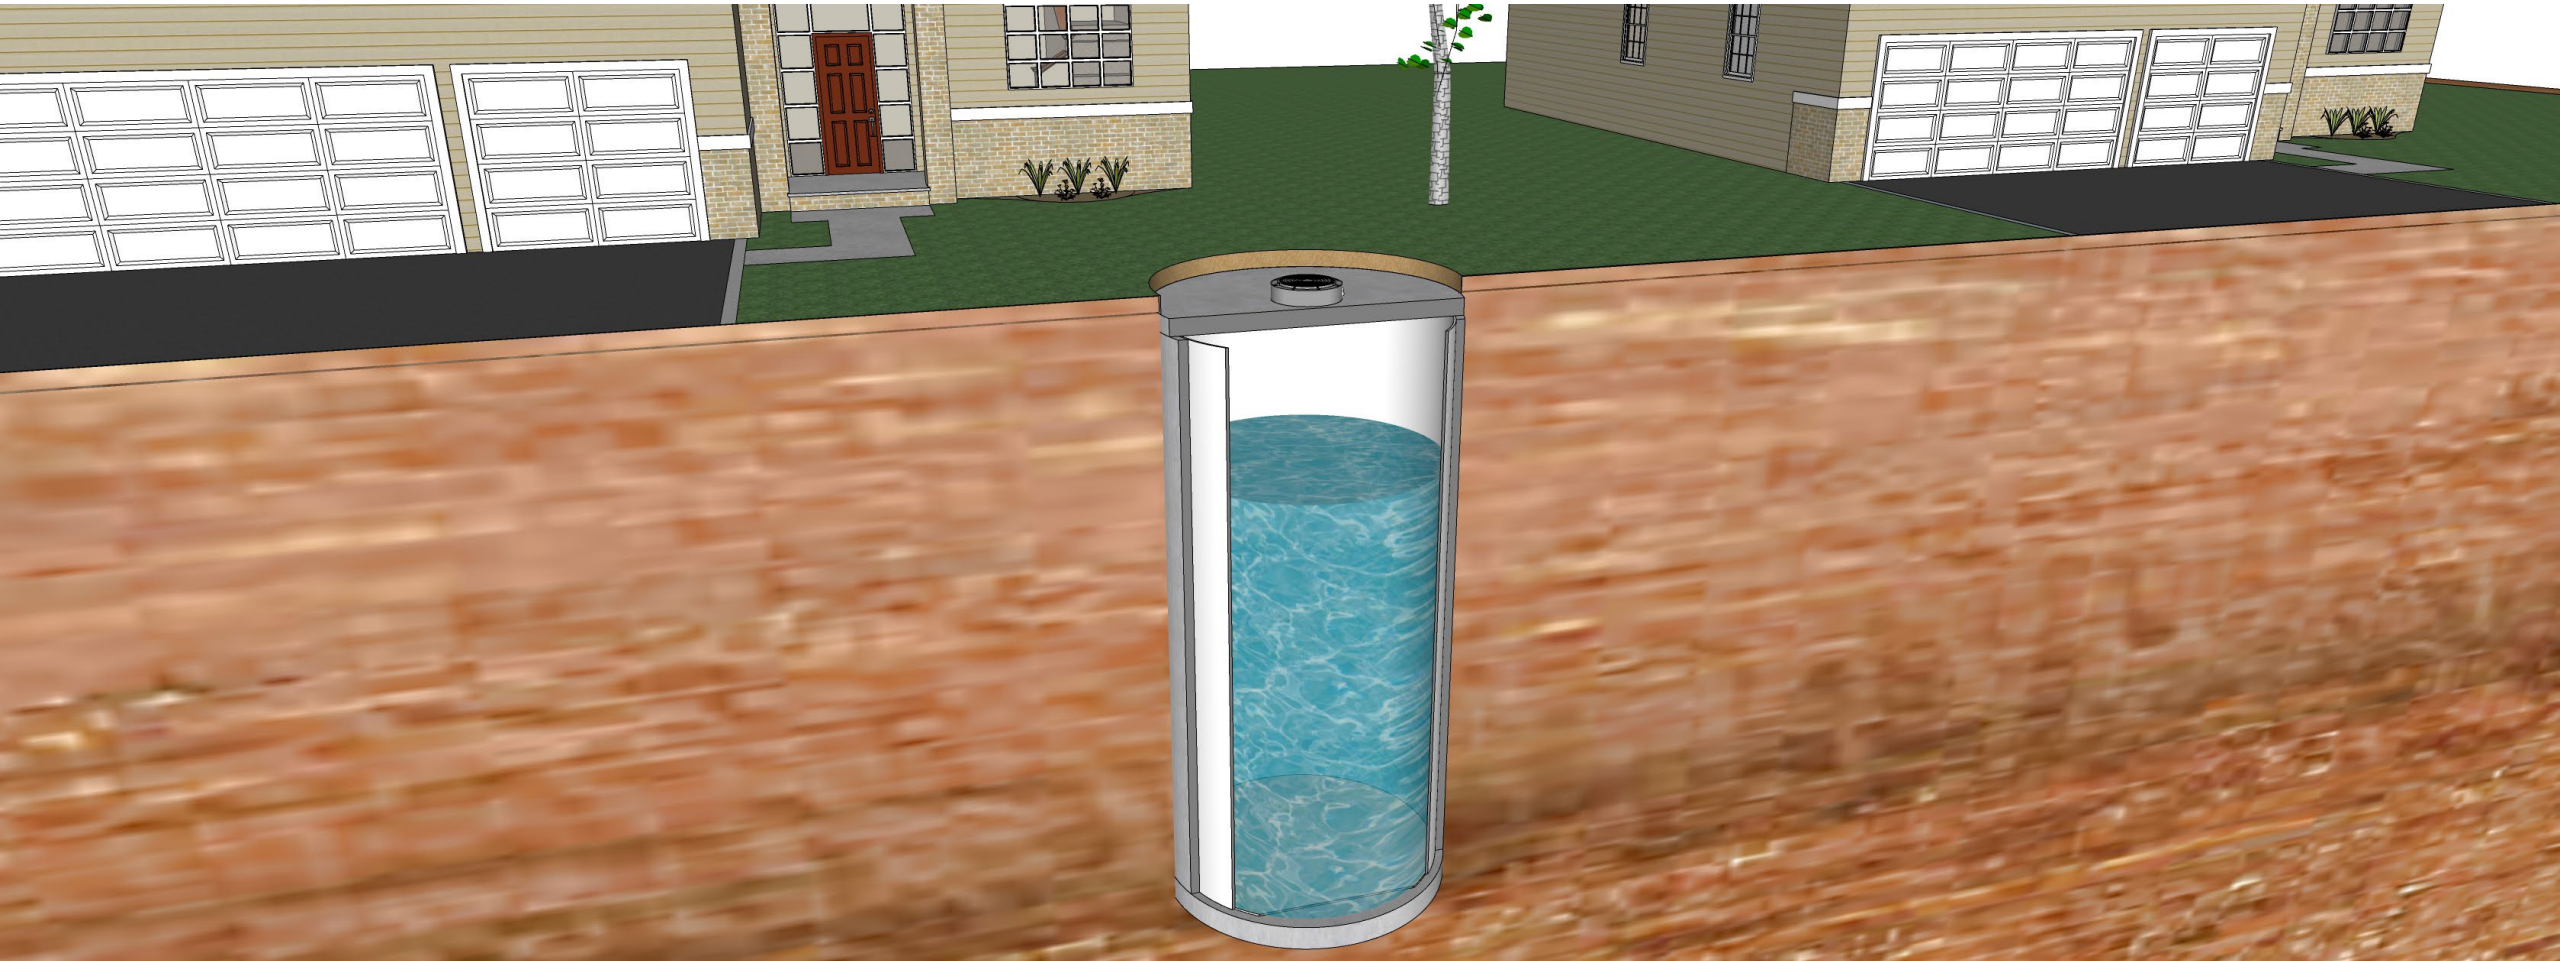

**SEITec**

25500 HAWTHORNE BLVD, #2230  
TORRANCE, CA 90505  
[www.WaterSilo.us](http://www.WaterSilo.us)  
[info@Seitecinc.com](mailto:info@Seitecinc.com)


# Residential / Commercial Property




# Excavate Cistern Footprint




# Drill Shaft

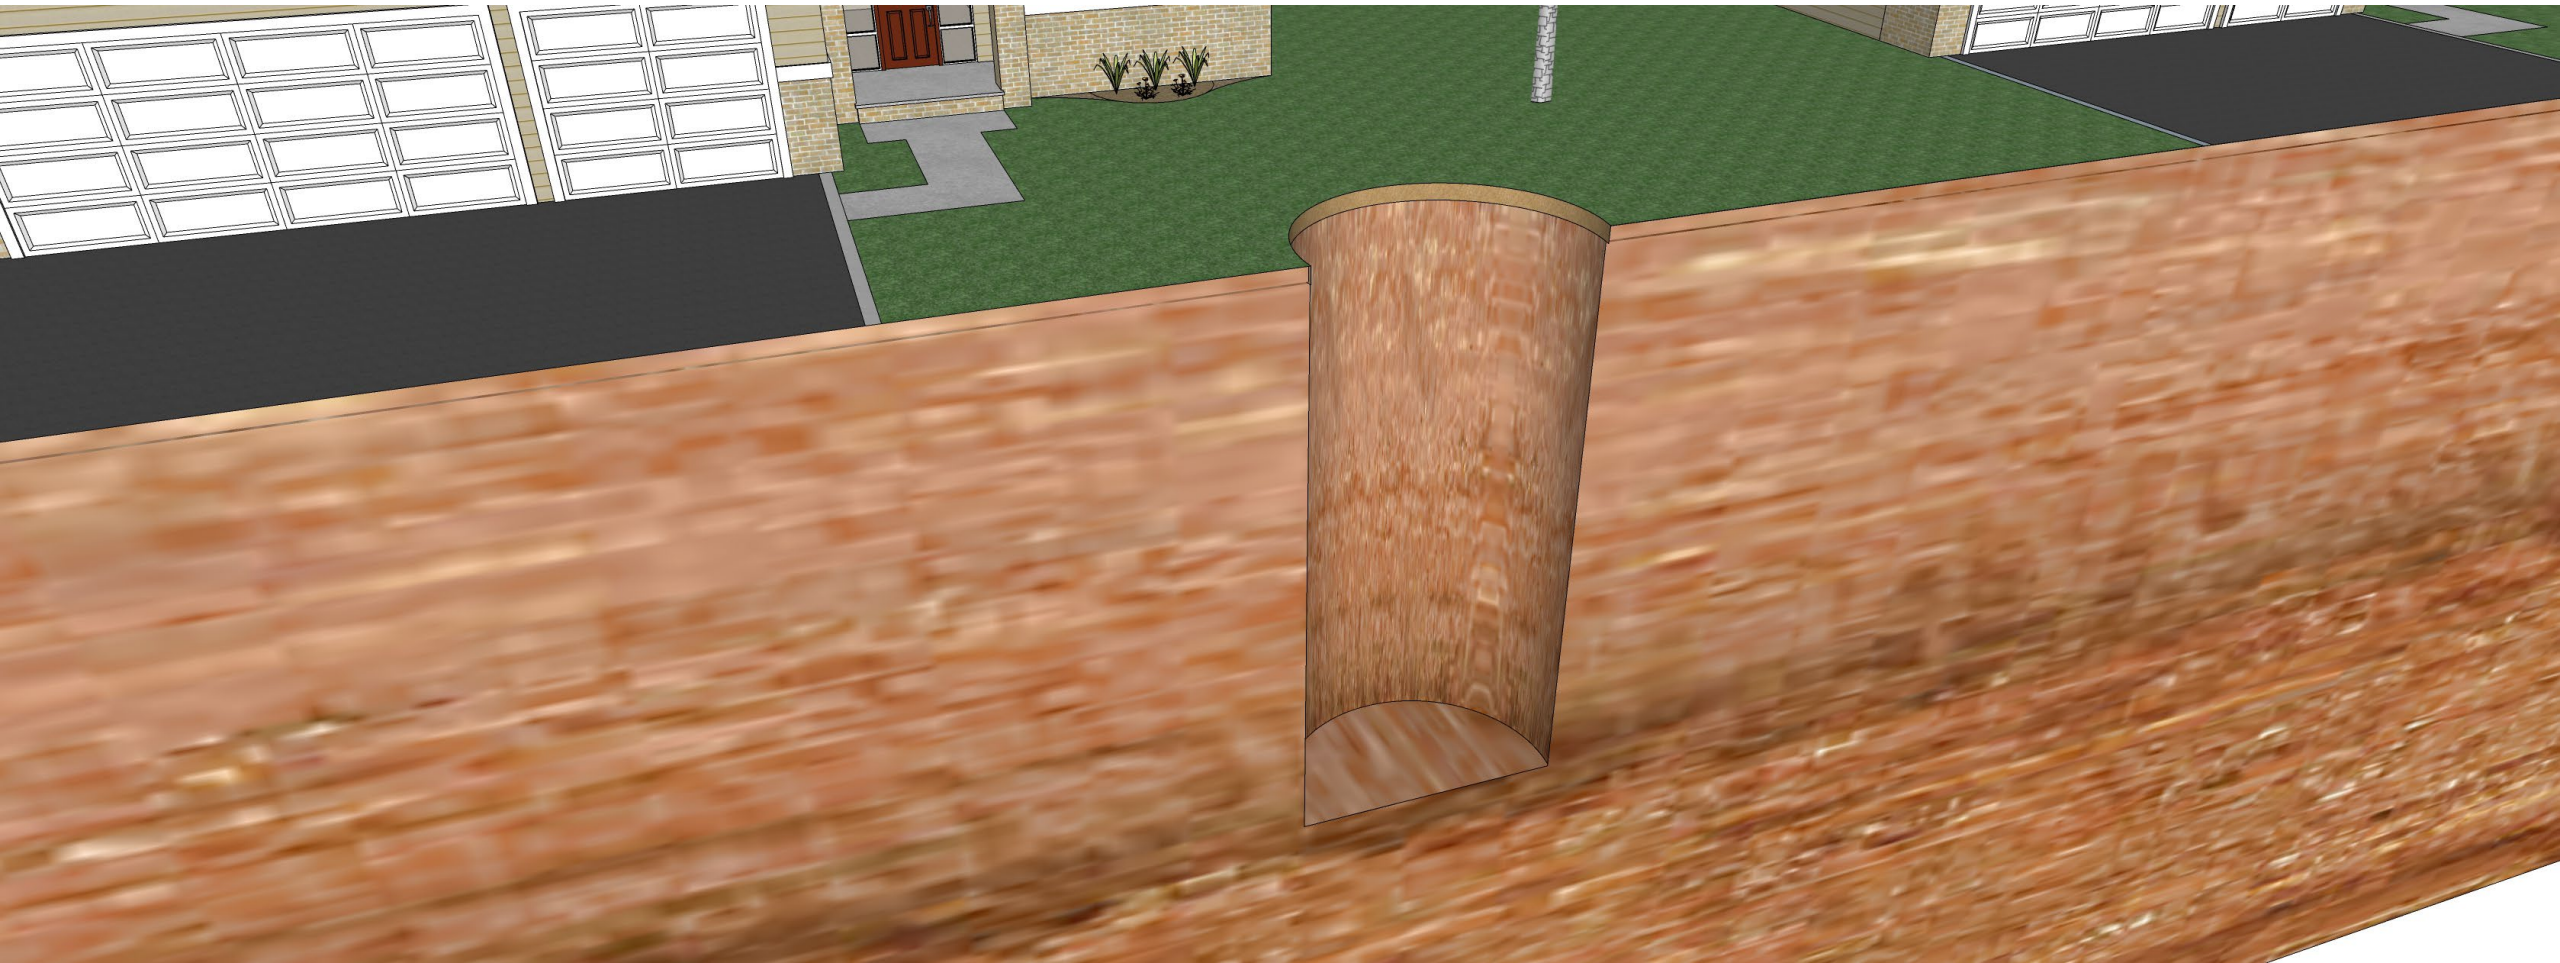


# Pour Base Concrete

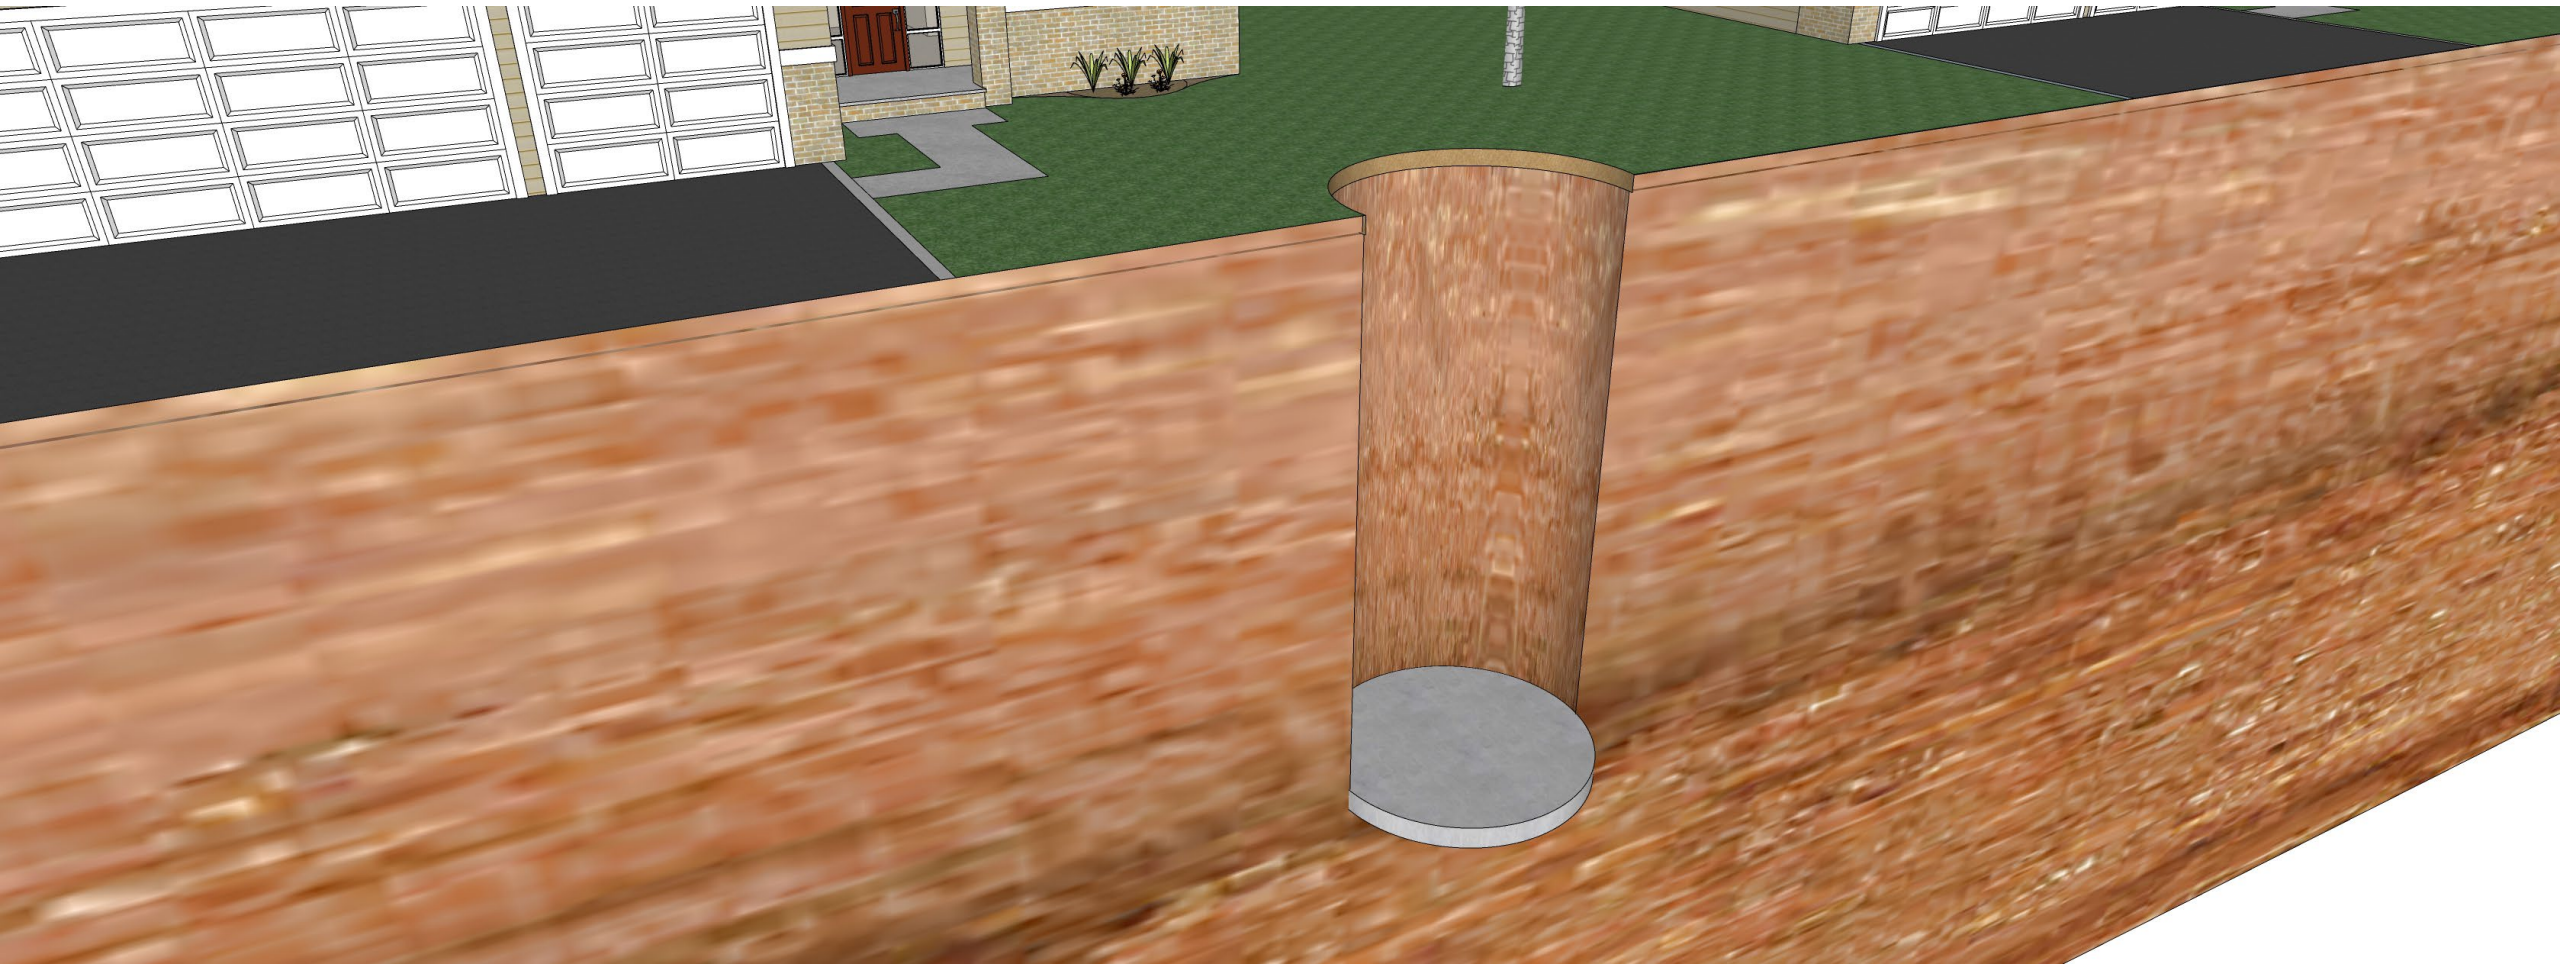


# Insert Tank

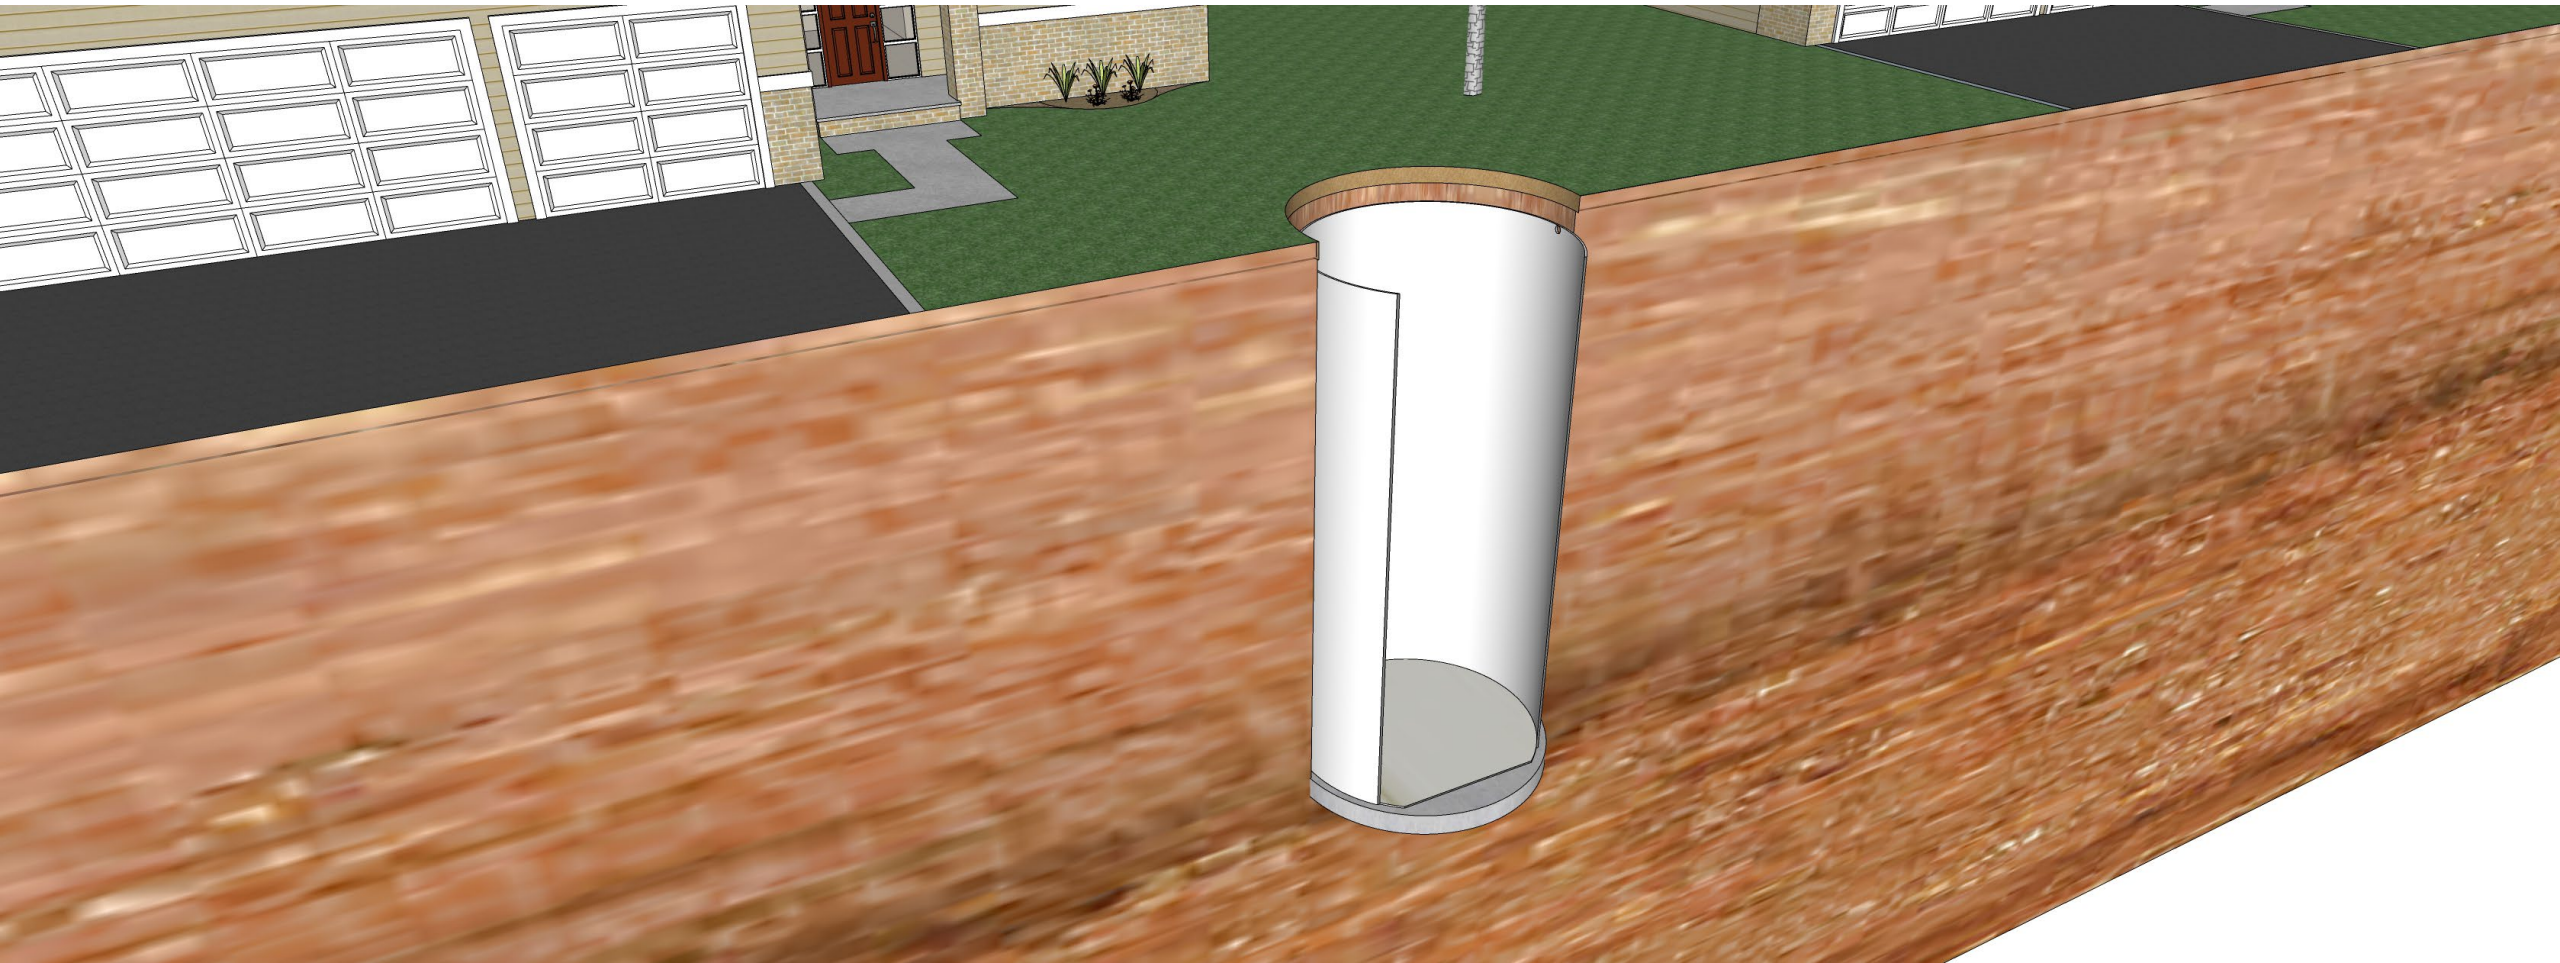

# Pour Encasement Concrete

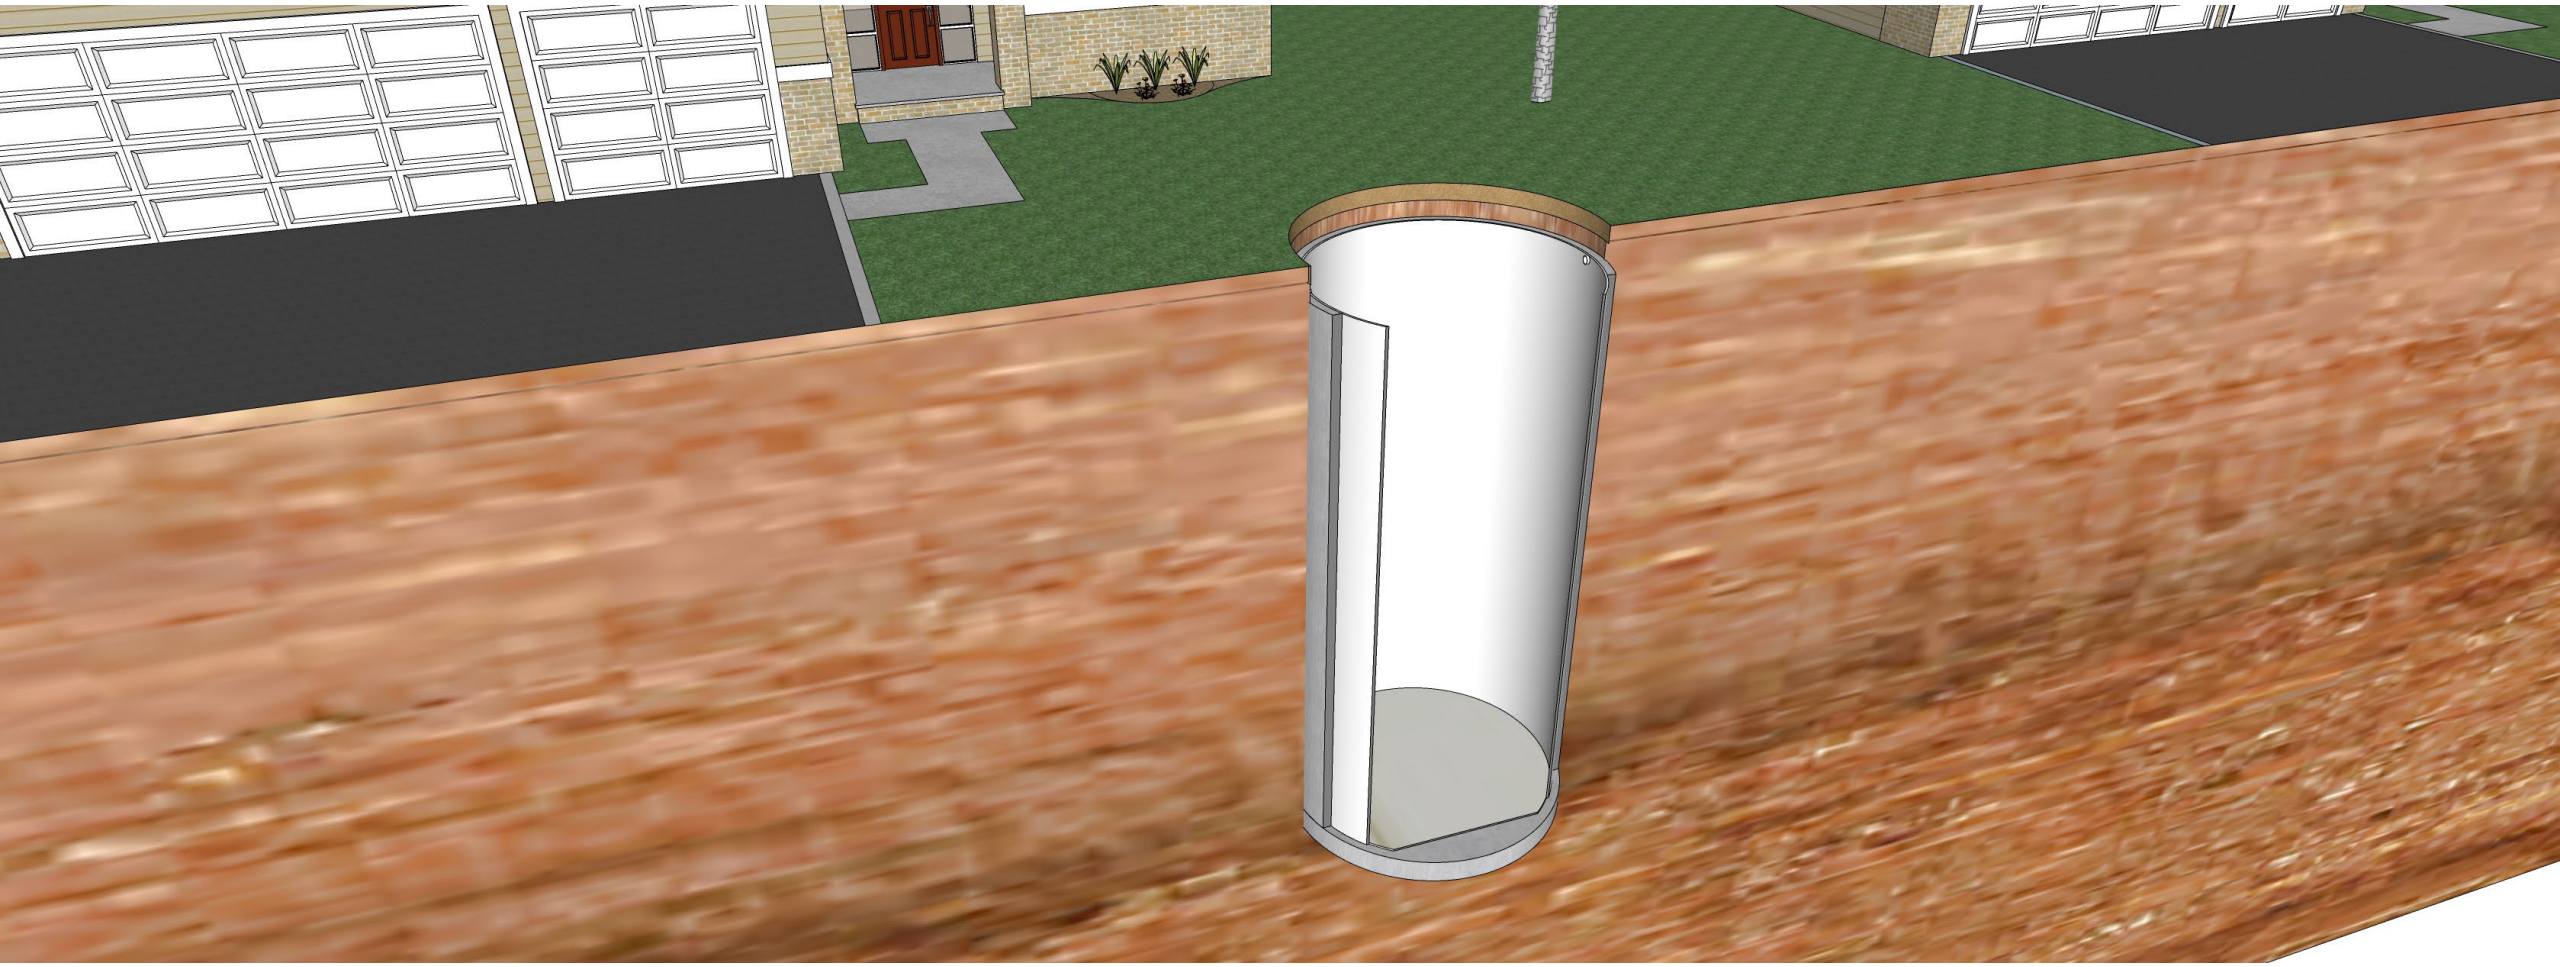


Place RC Slab

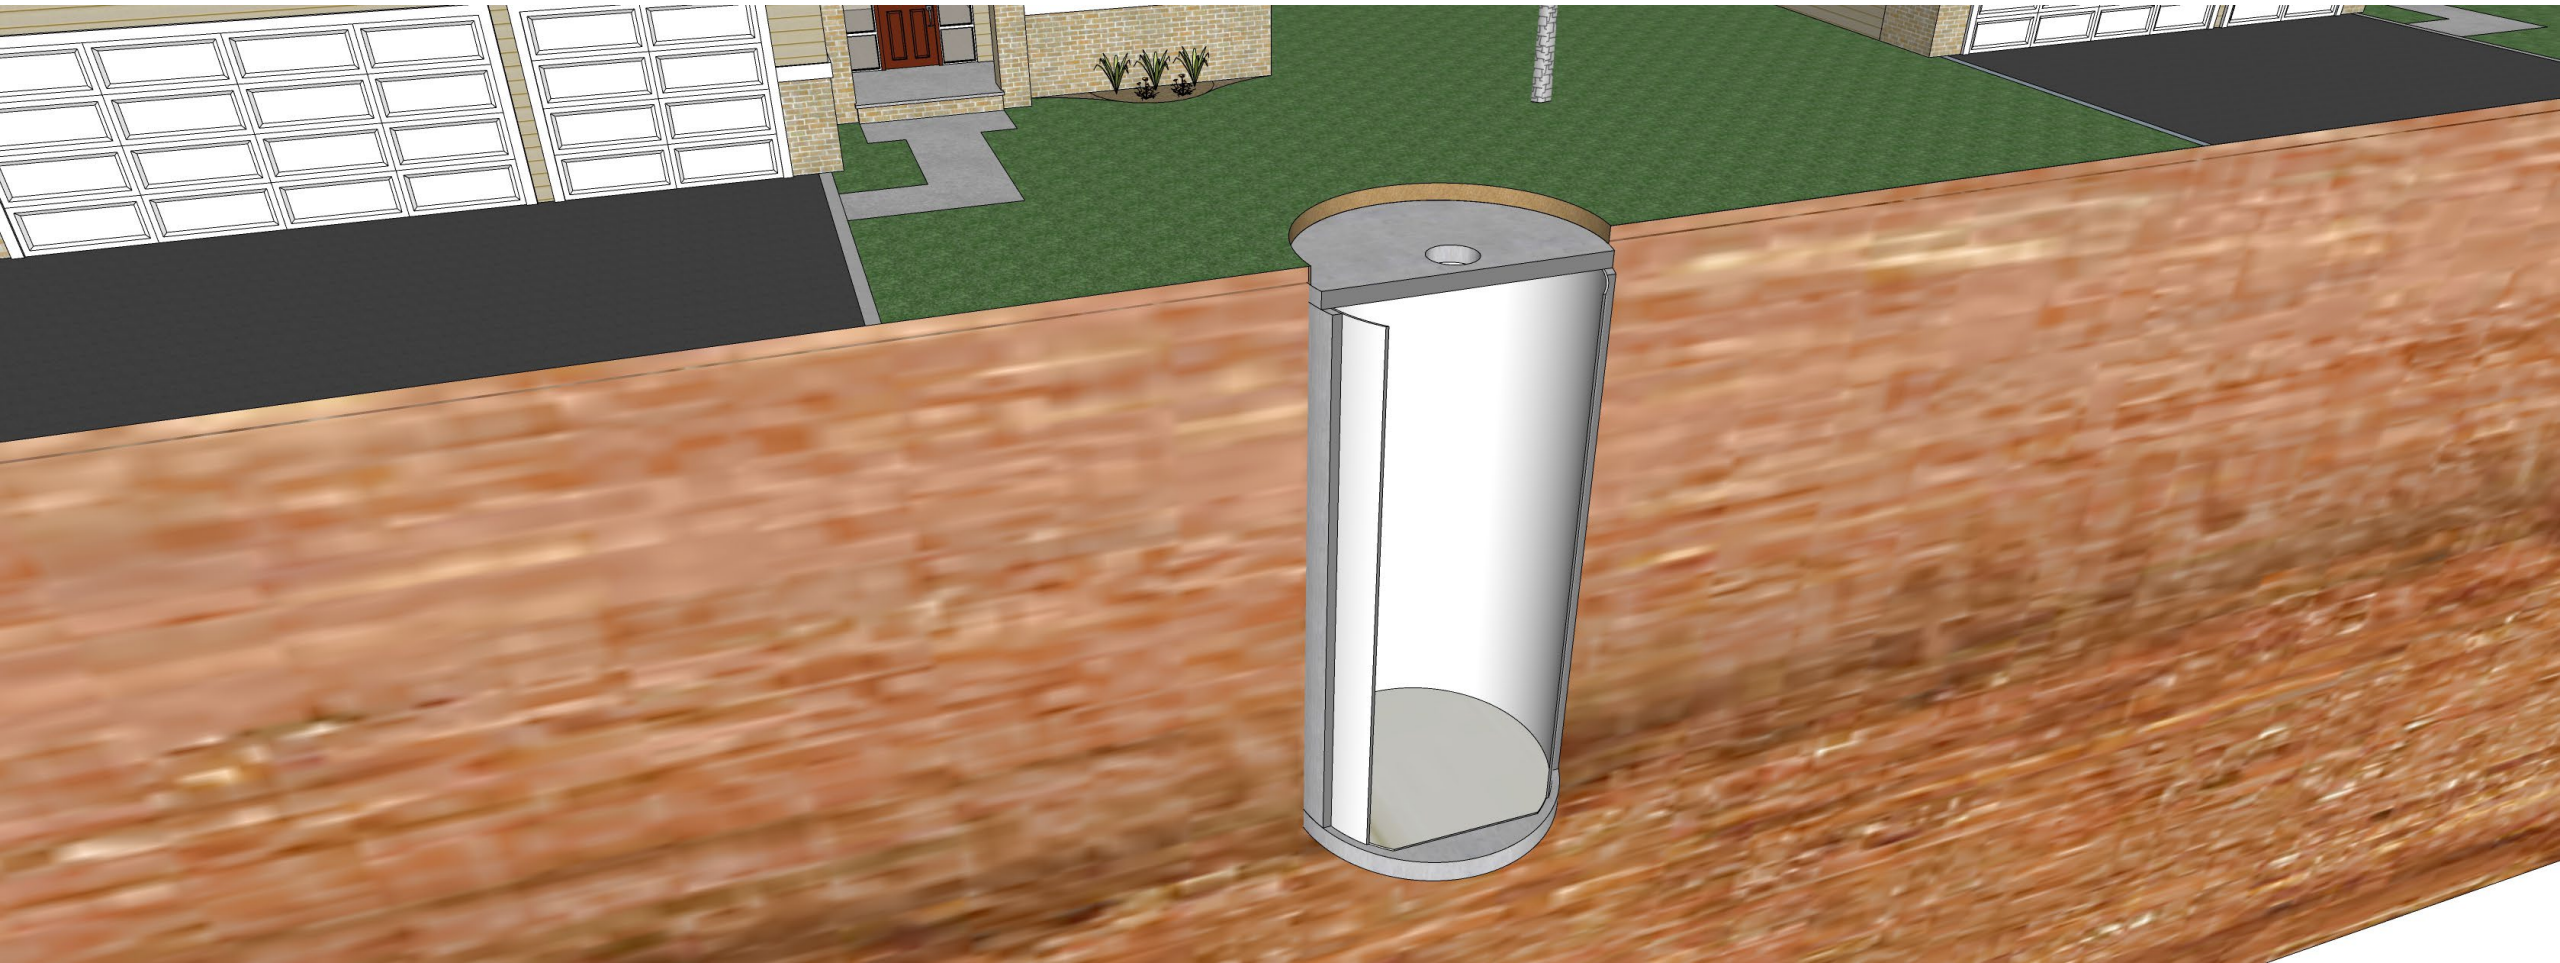




# Install Plastic Lid and Riser

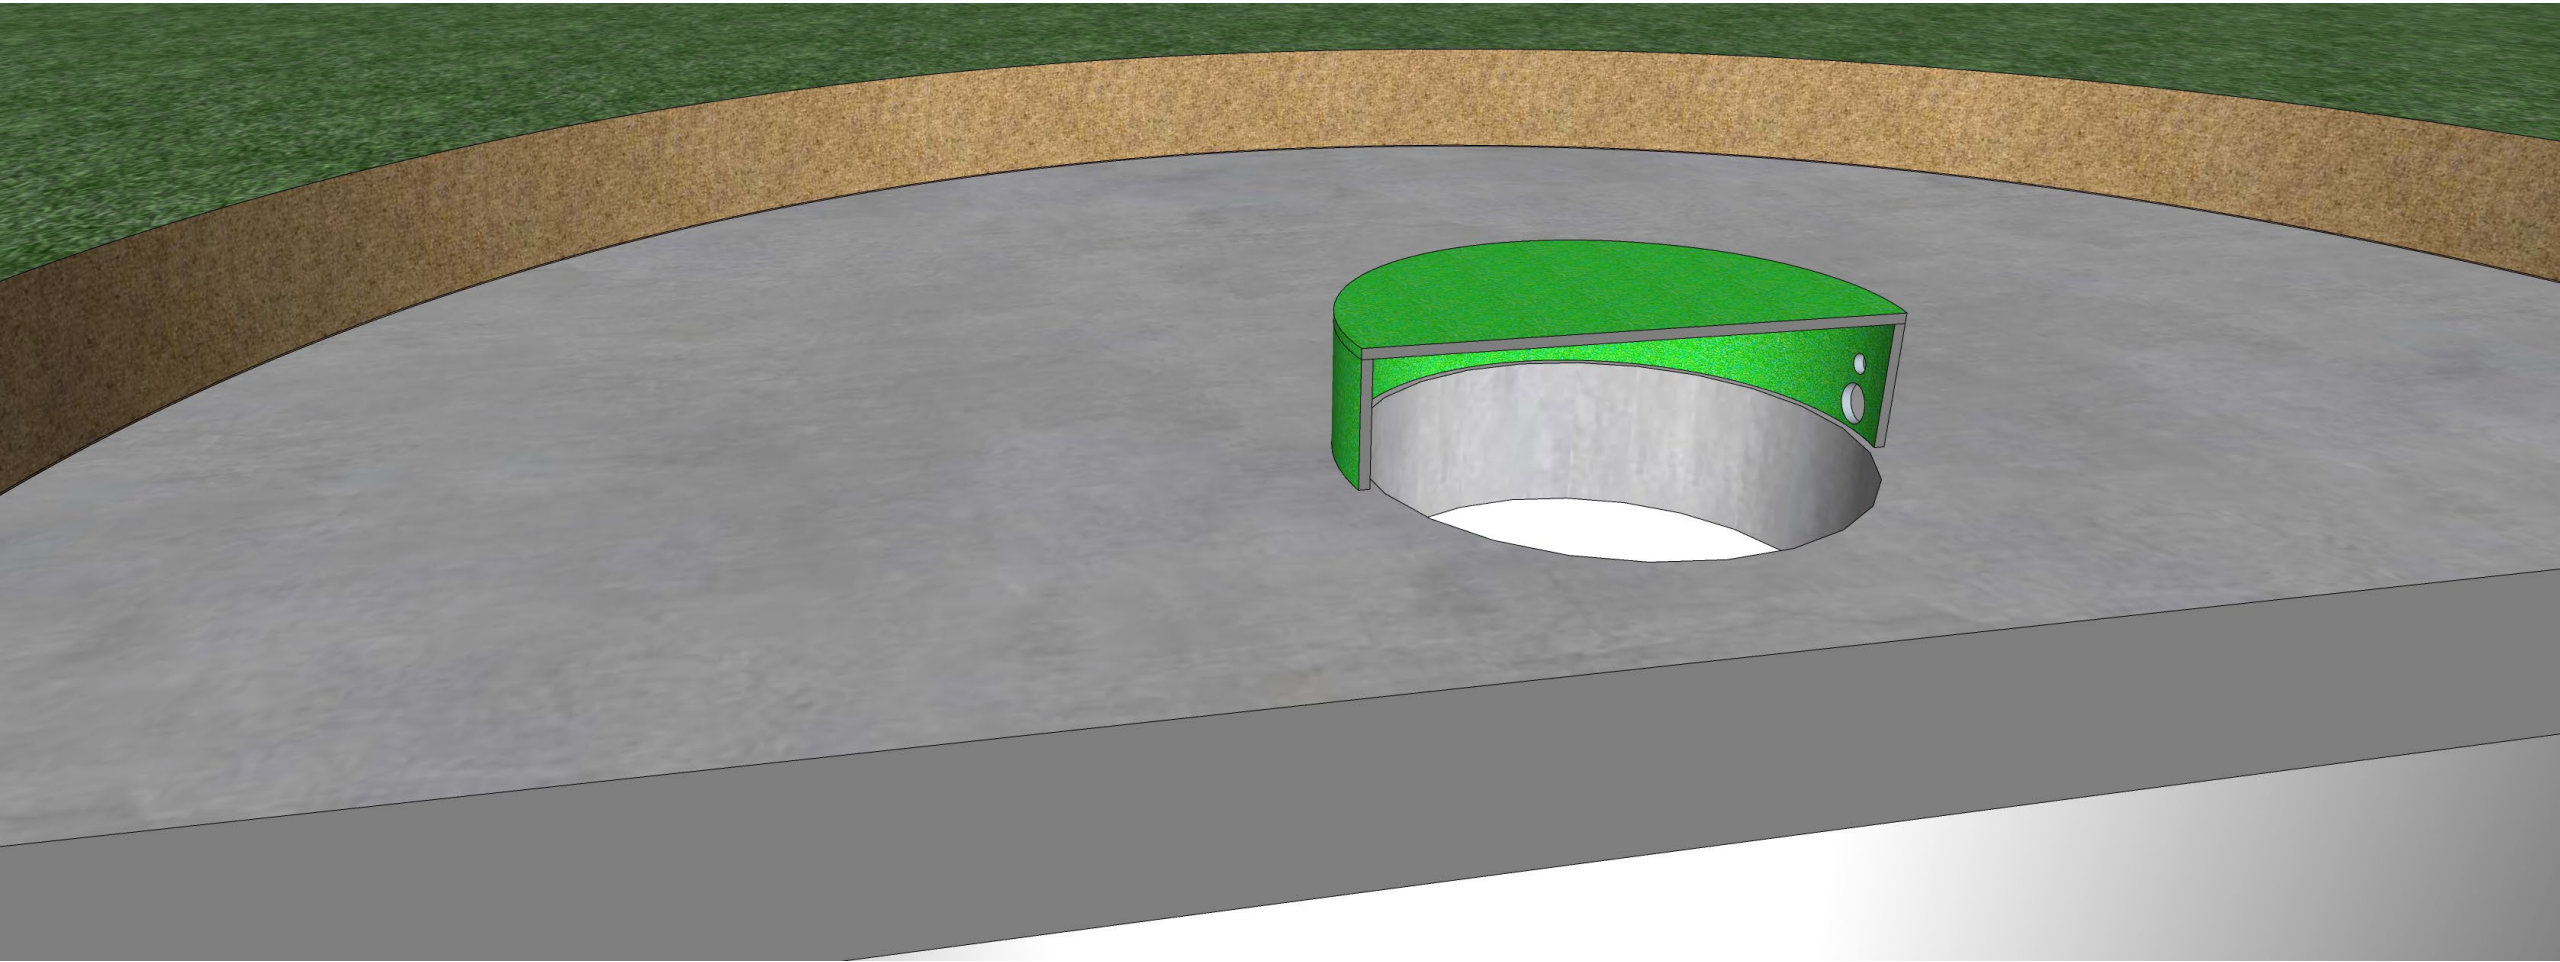

# Install Cast Iron Frame & Cover plus Conuits

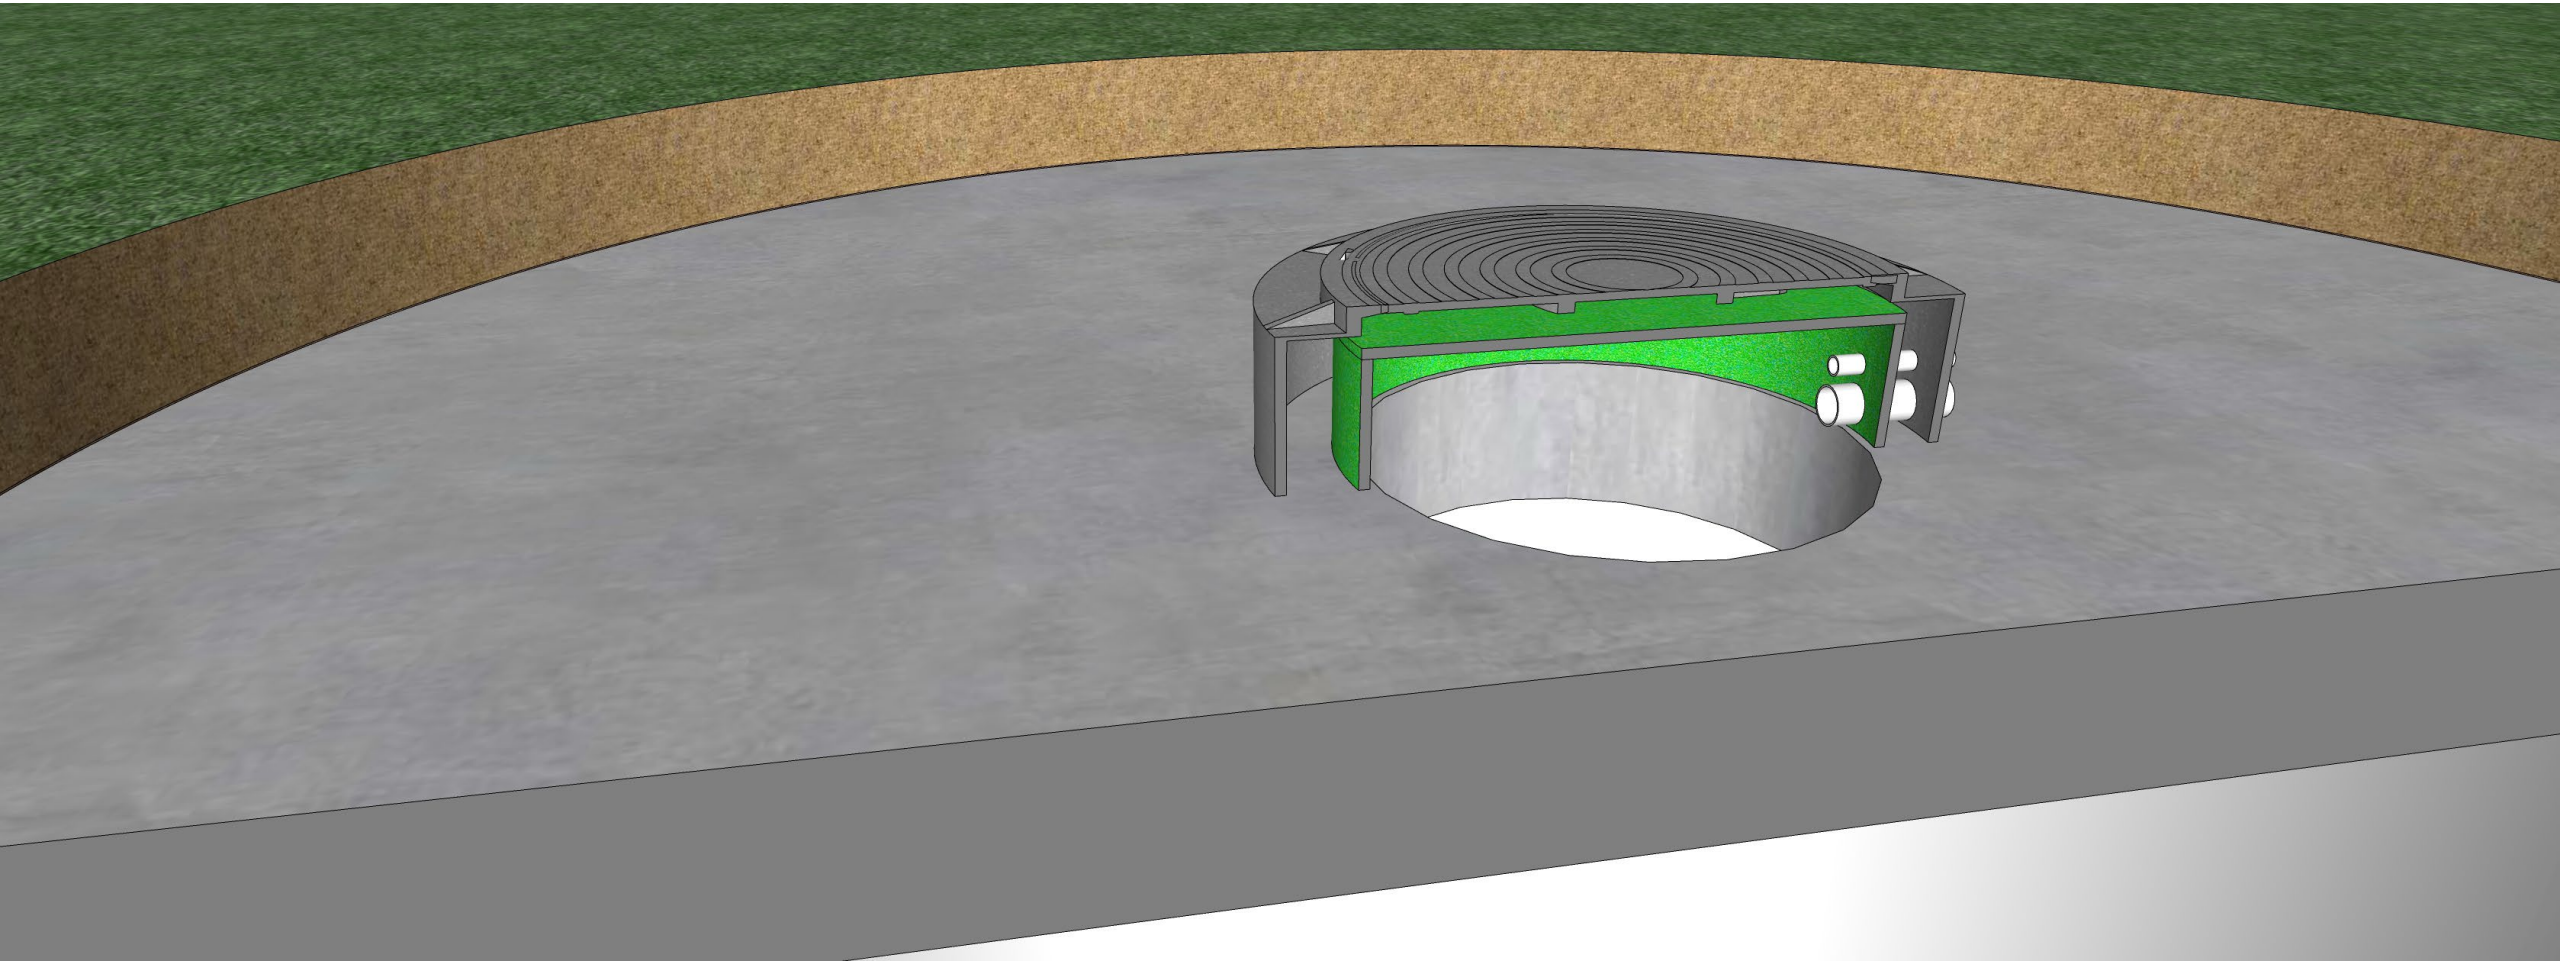

# Installed Cistern Slab and Lid



# Installed WaterSilo Drilled Shaft Cistern



# Installed WaterSilo Drilled Shaft Cistern

